

MIRRORS - POWER

1994 Mitsubishi 3000GT

1994 ACCESSORIES & SAFETY EQUIPMENT
Chrysler Corp./Mitsubishi Power Mirrors

Dodge; Stealth
Mitsubishi: 3000GT

DESCRIPTION & OPERATION

Electric remote control mirrors are controlled by a dual-control switch mounted on driver's door, dash or center console depending on model. Left/right switch directs current to desired mirror. Horizontal/vertical switch directs current to electric motor in mirror assembly, controlling up/down and left/right adjustment. Heated mirrors are controlled by defogger relay.

TROUBLE SHOOTING


POWER MIRRORS INOPERATIVE

Check for faulty fuse, faulty power mirror switch or faulty power mirror motor. See POWER MIRROR FUSE IDENTIFICATION table.

POWER MIRROR FUSE IDENTIFICATION TABLE

Application	Fuse No.
Stealth & 3000GT	5

TESTING

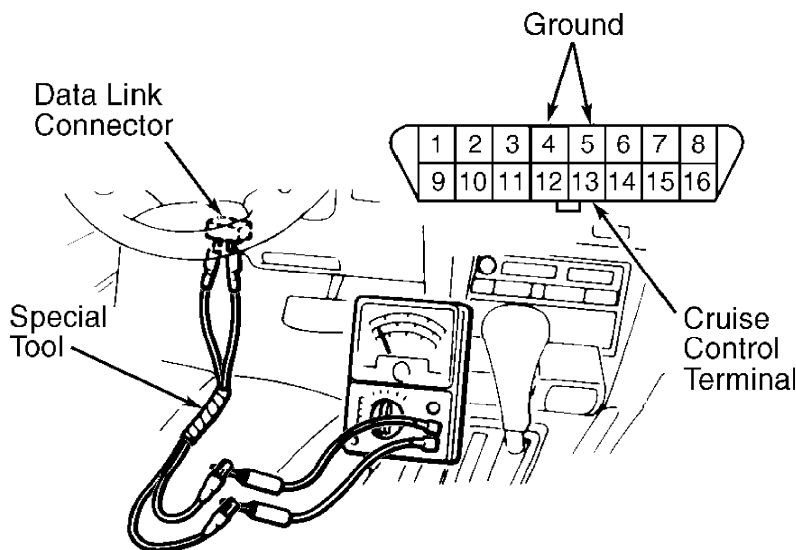


94D46295

Fig. 1: Identifying Data Link Connector Terminals
Courtesy of Mitsubishi Motor Sales of America.


POWER MIRROR MOTOR TEST

Connect 12-volt power source to mirror connector terminals.
See Fig. 2 and Fig. 4. Replace mirror as necessary.

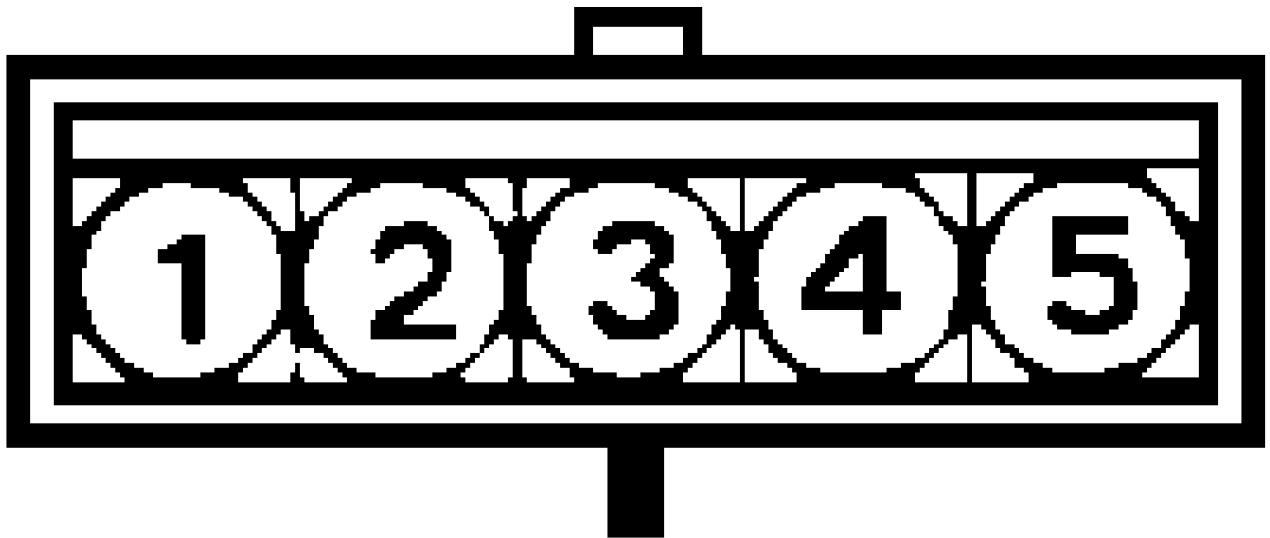





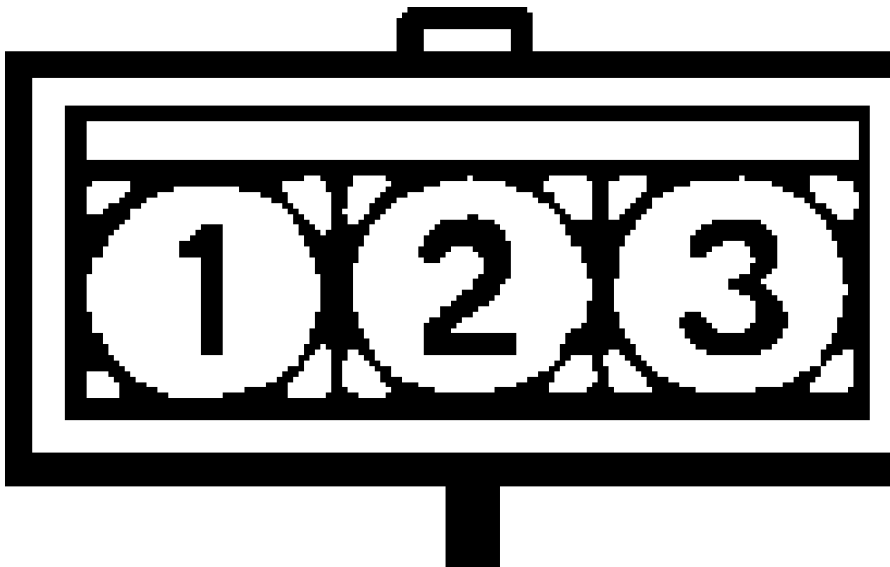









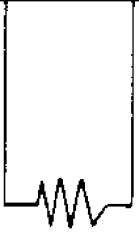


93F83290

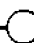 Fig. 2: Power Mirror Connector With Heater (Stealth & 3000GT)
Courtesy of Mitsubishi Motor Sales of America.



94D46725

Fig. 3: Power Mirror Connector Without Heater (Stealth & 3000GT)
Courtesy of Mitsubishi Motor Sales of America.

<div> <div>Connection</div> <div>Direction</div> </div>	Battery		Terminal				
	(+)	(-)	2 (1)*	3 (2)*	4 (3)*	1	5
UP							
DOWN							
RIGHT							
LEFT							

NOTE

- (1) — indicates that each terminal is connected to the battery.
- (2) * indicates door mirror terminal on vehicles without heater.

93B83296

Fig. 4: Power Mirror Operational Test Charts (Stealth & 3000GT)
Courtesy of Mitsubishi Motor Sales of America.



POWER MIRROR SWITCH TEST

Remove mirror switch. Using ohmmeter, check continuity of switch. See appropriate POWER MIRROR SWITCH CONTINUITY CHART. See Fig. 5. Replace switch if switch continuity is not as specified.

POWER MIRROR SWITCH CONTINUITY CHART

Switch Position	(1) Check Continuity Between
Left Side	
UP	Pins No. 4 & 8; Pins No. 6 & 7
DOWN	Pins No. 4 & 7; Pins No. 6 & 8
LEFT	Pins No. 3 & 6; Pins No. 4 & 7
RIGHT	Pins No. 3 & 4; Pins No. 6 & 7 Right
Side	
UP	Pins No. 2 & 4; Pins No. 6 & 7
DOWN	Pins No. 2 & 6; Pins No. 4 & 7
LEFT	Pins No. 4 & 7; Pins No. 6 & 9
RIGHT	Pins No. 4 & 9; Pins No. 6 & 7

(1) - See Fig. 5.

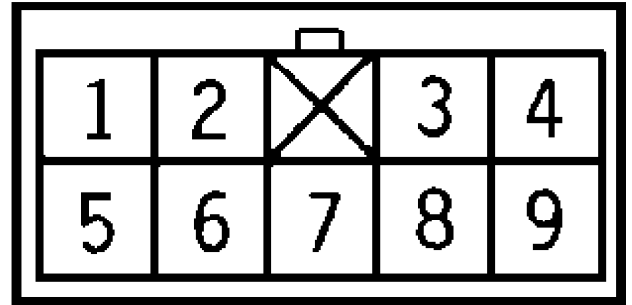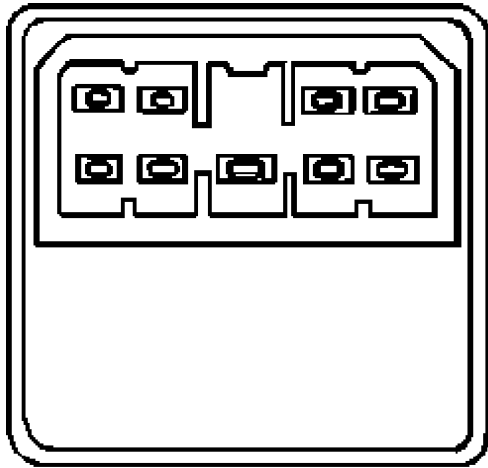

93D83298

Fig. 5: Identifying Power Mirror Switch Terminals
 Courtesy of Mitsubishi Motor Sales of America.

REMOVAL & INSTALLATION

POWER MIRROR ASSEMBLY

Remove delta cover (trim cover), screws and electrical connector. Remove mirror assembly. To install, reverse removal procedure.

WIRING DIAGRAMS

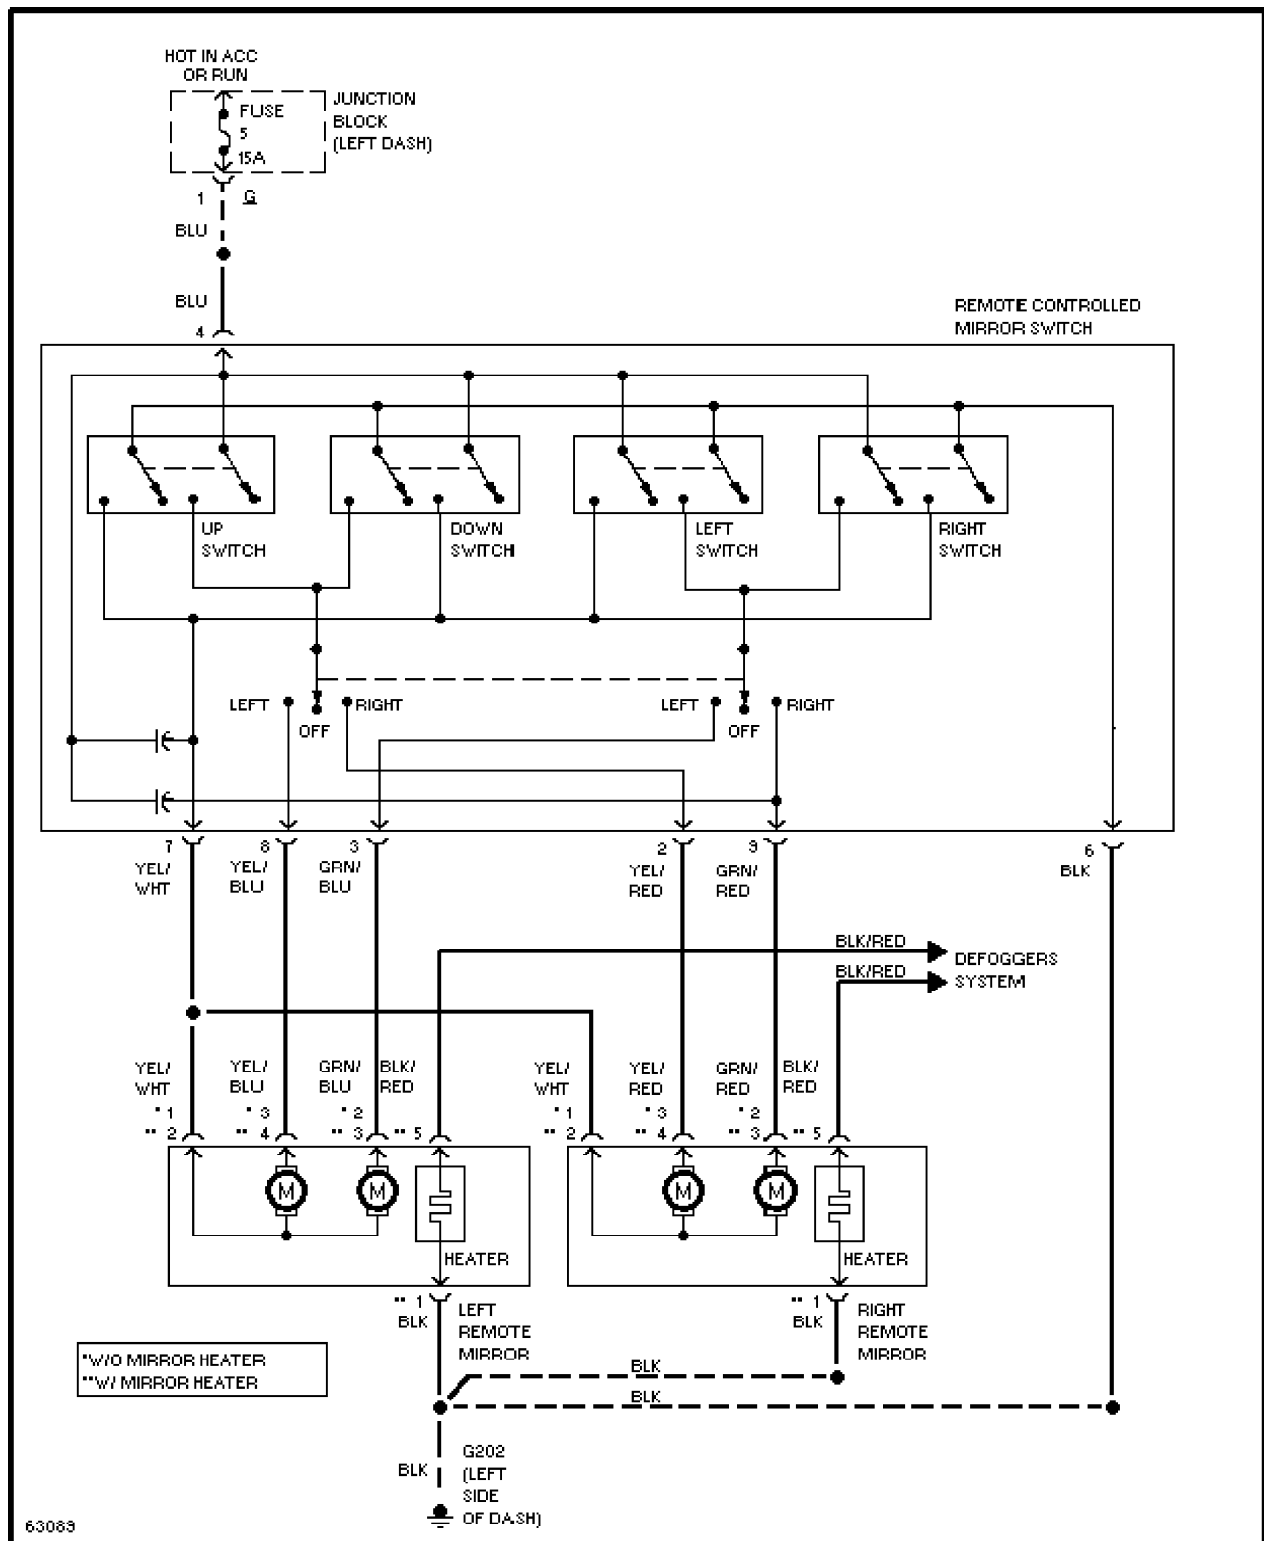


Fig. 6: Power Mirrors Wiring Diagram (Stealth & 3000GT)
 Courtesy of Mitsubishi Motor Sales of America.