

STEERING COLUMN SWITCHES

1994 Mitsubishi 3000GT

1994 ACCESSORIES & SAFETY EQUIPMENT
Chrysler Corp./Mitsubishi Steering Column Switches

Dodge: Stealth
Mitsubishi: 3000GT

TESTING

For steering column switch testing See Fig. 1

REMOVAL & INSTALLATION

* PLEASE READ THIS FIRST *

WARNING: Wait at least 60 seconds after disconnecting negative battery cable before servicing air bag system. System voltage is maintained for about 60 seconds after battery is disconnected. Failure to wait 60 seconds before servicing system may cause accidental air bag deployment and possible personal injury.

NOTE: For service procedures relating to air bag module removal and installation, and disabling and activation of air bag system, see AIR BAG RESTRAINT SYSTEM article.

IGNITION SWITCH

Removal & Installation


Remove knee protector. Remove upper and lower steering column covers. Remove lap cooler duct and foot shower duct. Remove key reminder switch. See Fig. 1. Remove ignition switch. To install, reverse removal procedure.

STEERING COLUMN SWITCH

CAUTION: DO NOT hammer on steering wheel. Collapsible steering column mechanism may be damaged.

Removal & Installation

1) Remove air bag module. See AIR BAG RESTRAINT SYSTEM article. Remove steering wheel. Remove knee protector.
2) Remove upper and lower steering column covers. See Fig. 1. Remove lap cooler duct and foot shower duct. Remove left or right column switch. To install, reverse removal procedure.

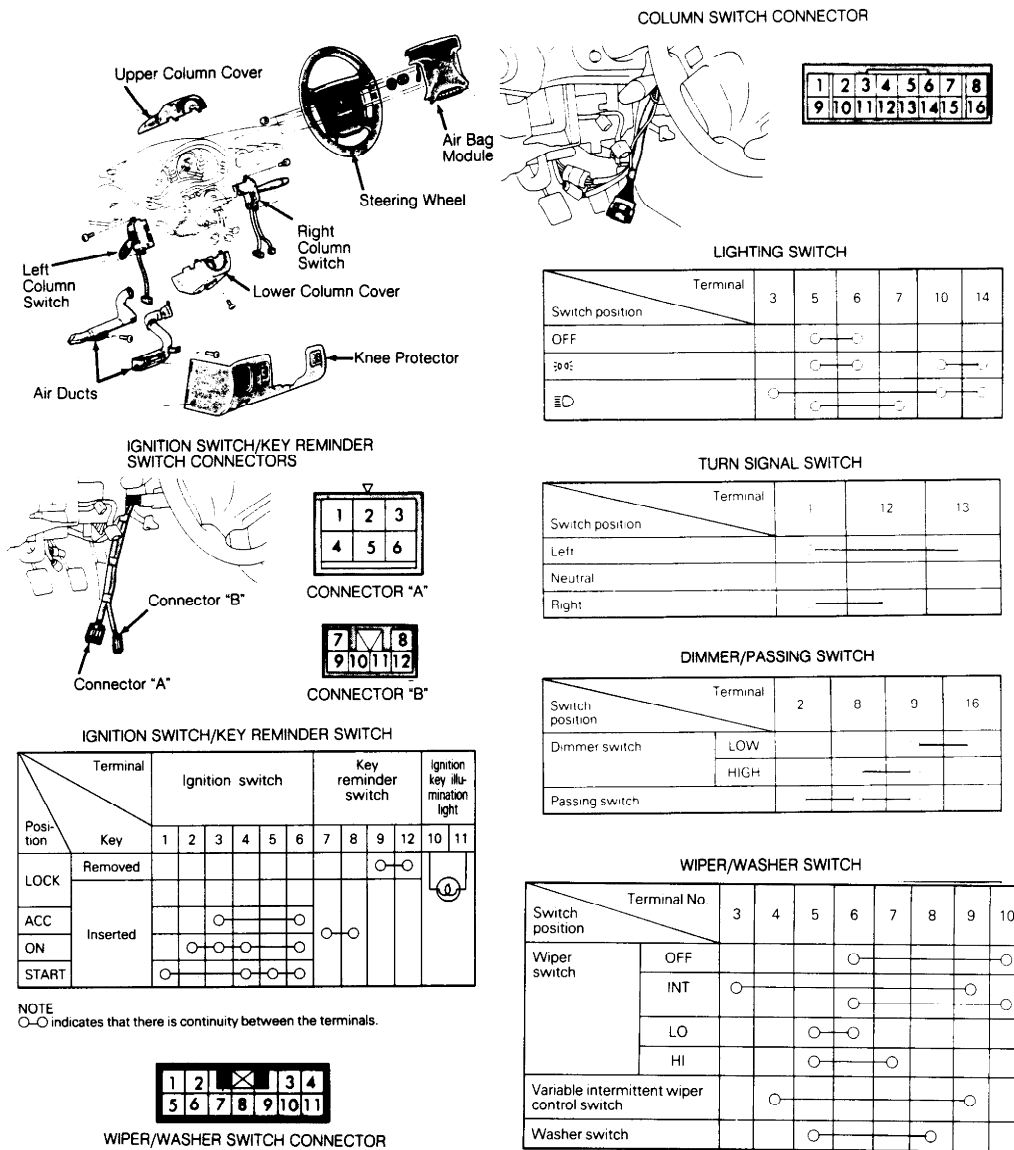

93B01104

NOTE
○-○ denotes that there is continuity between the terminals.

Fig. 1: Testing, Removing & Installing Steering Column Switches
Courtesy of Mitsubishi Motor Sales of America.

WIRING DIAGRAMS

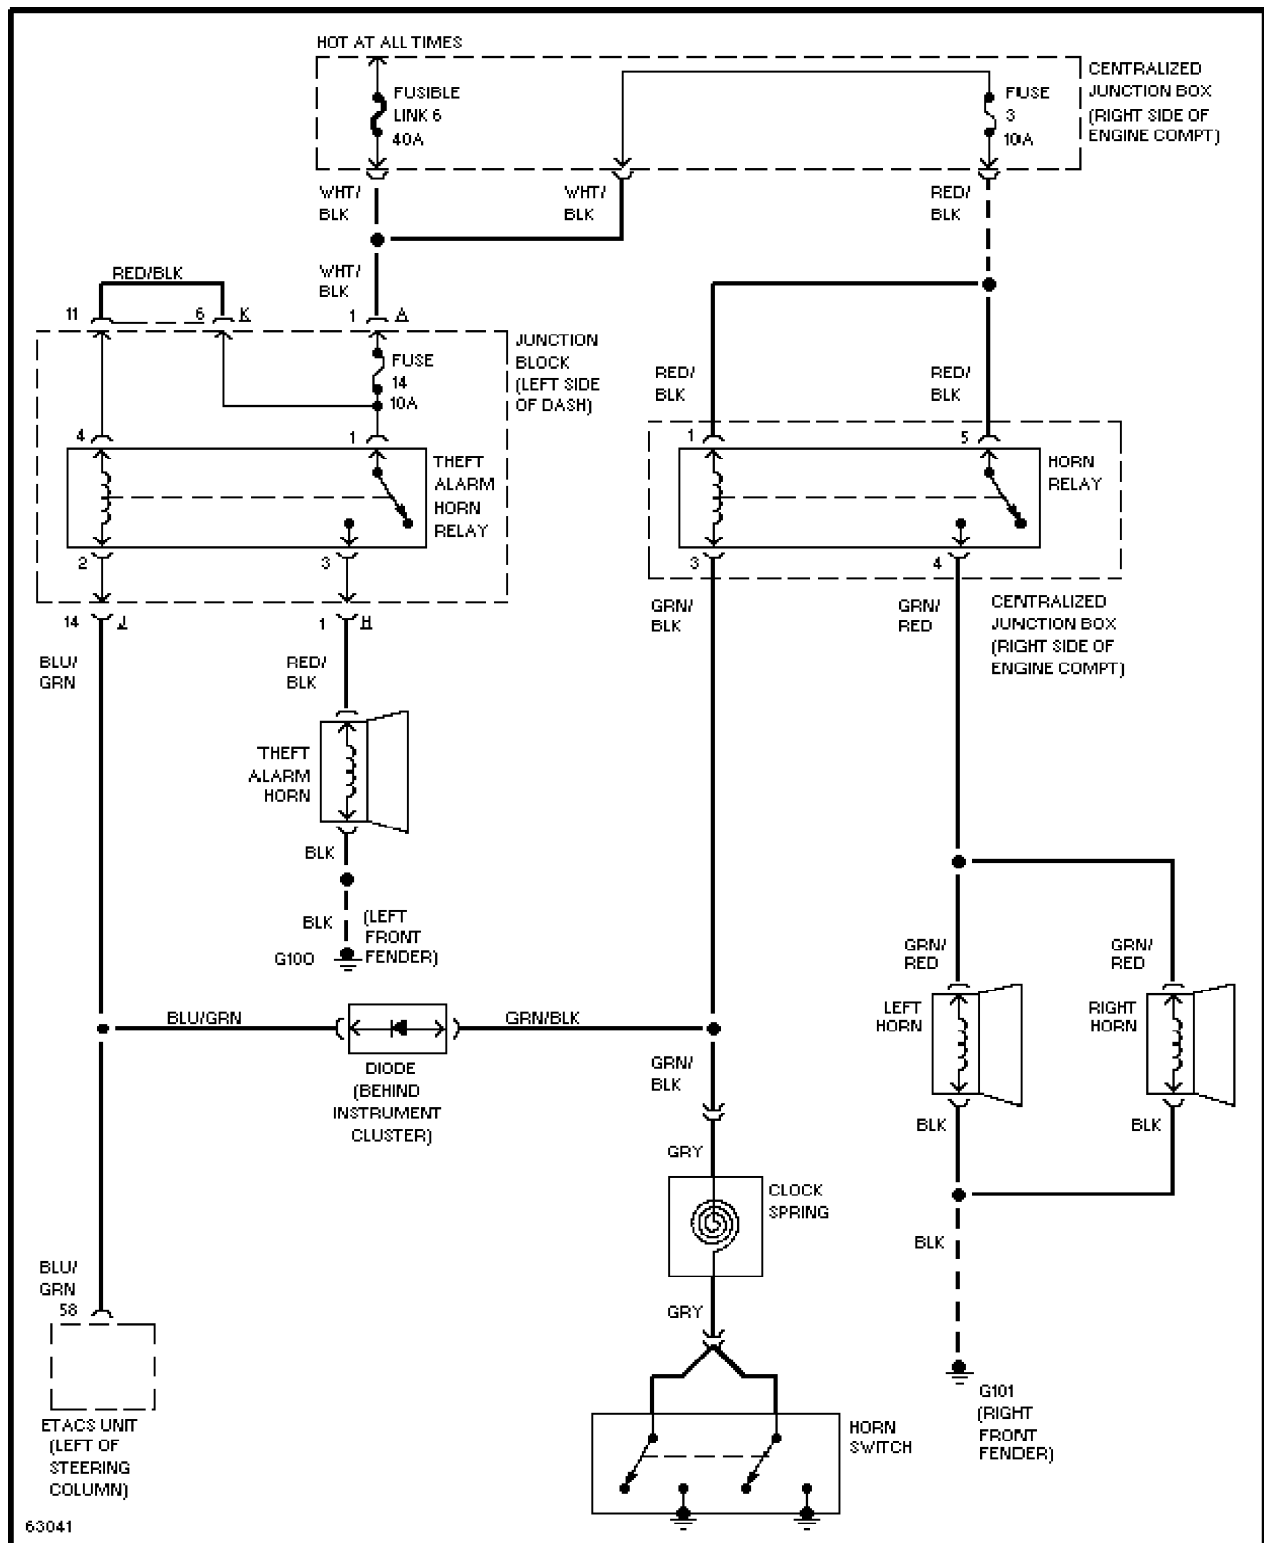


Fig. 2: Horn Wiring Diagram (Stealth & 3000GT - With Anti-Theft)
 Courtesy of Mitsubishi Motor Sales of America.

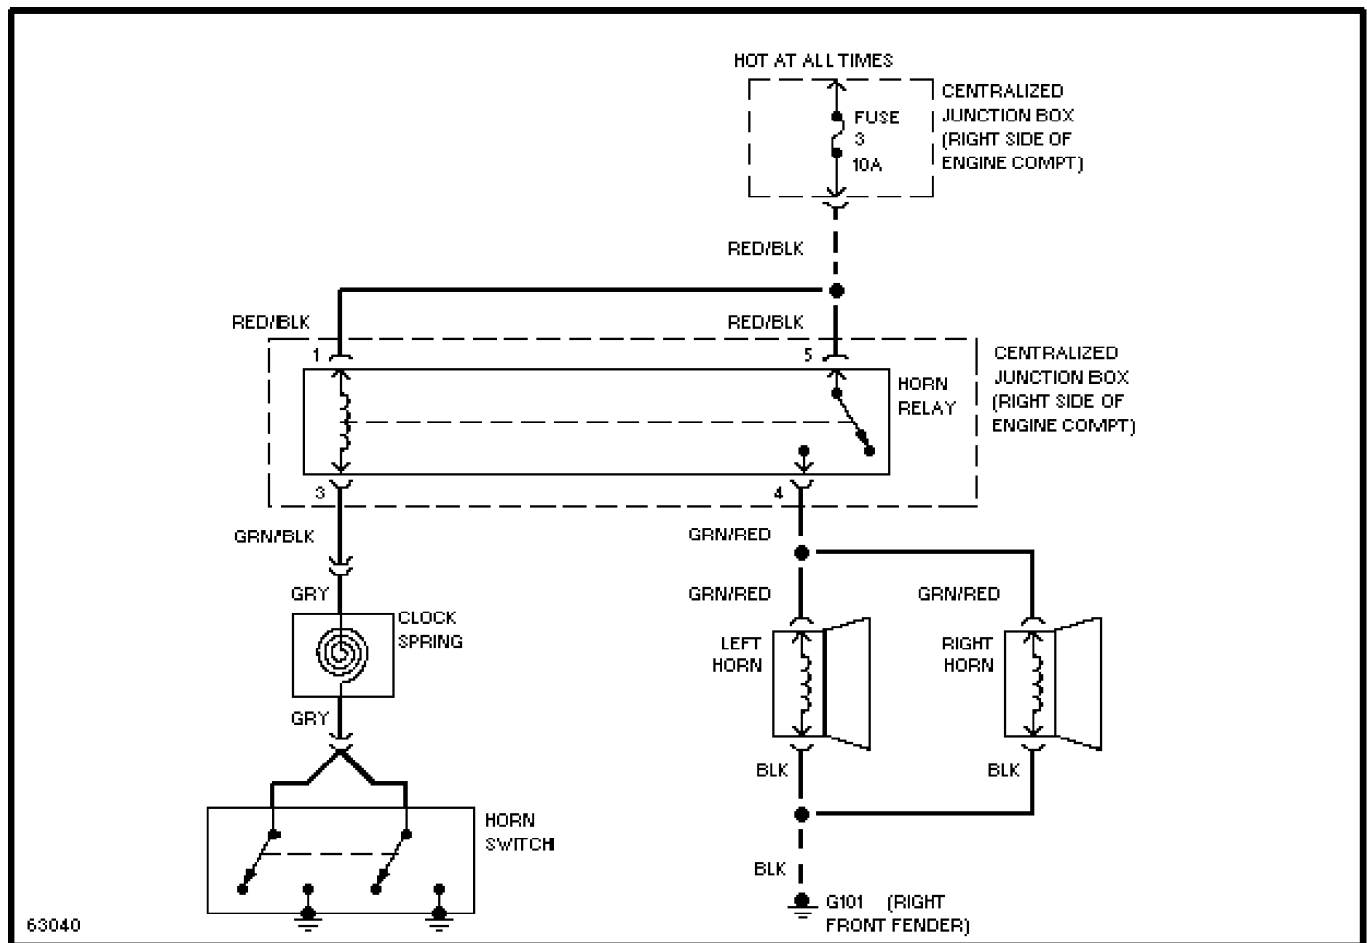


Fig. 3: Horn Wiring Diagram (Stealth & 3000GT - Without Anti-Theft)
 Courtesy of Mitsubishi Motor Sales of America.