

FUSES & CIRCUIT BREAKERS

1994 Mitsubishi 3000GT

Fuses & Circuit Breakers
1991-95 Mitsubishi

3000GT


FUSES & CIRCUIT BREAKERS

FUSE PANEL IDENTIFICATION

Fuse block is located under instrument panel on driver's side. In event of a blown fuse, locate cause before replacing fuse. Spare fuses are contained in the fuse cover.

FUSIBLE LINKS

Fusible Links will melt (to prevent fire) in case a large current flows through the electrical systems without passing through the fuses.

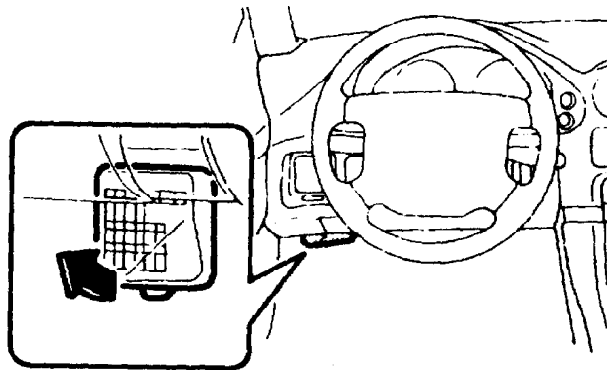

50A11551


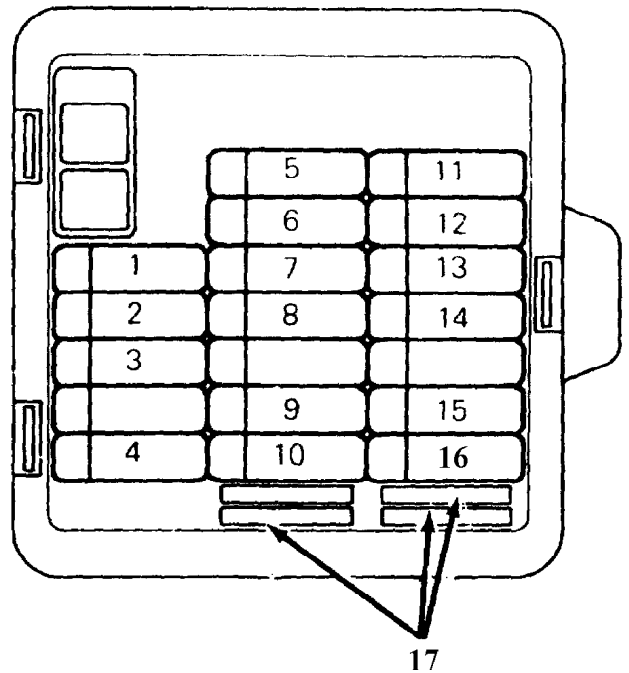


Fig. 1: Fuse Block Identification
Courtesy of Mitsubishi Motors.

Fuse & Circuit Breaker Identification

- 1 - 15 Amp (Light Blue)
Cigarette Lighter
- 2 - 10 Amp (Red)
Radio
- 3 - 10 Amp (Red)
Heater Relay
- 4 - 10 Amp (Red)
Seat Belt Warning Buzzer
- 5 - 15 Amp (Light Blue)
Engine

- 6 - 15 Amp (Light Blue)
Turn Signals
- 7 - 15 Amp (Light Blue)
Headlight Relay
- 8 - 15 Amp (Light Blue)
Wiper
- 9 - 10 Amp (Red)
(Automatic Transaxle)
- 10 - 10 Amp (Red) (1991-93)
Headlight, Pop-Up Relay
- 10 - 10 Amp (Red) (1994-95)
Door Locks
- 11 - 10 Amp (Red)
Dome Light
- 12 - 10 Amp (Red)
Back-Up Lights
- 13 - 15 Amp (Light Blue)
Stoplights
- 14 - 30 Amp (Green)
Heater
- 15 - 10 Amp (Red)
Anti-Theft
- 16 - Spare Fuse (1991-92)
- 16 - 15 Amp (Light Blue) 1994-95
Amplifier
- 17 - Spare Fuse 1994-95

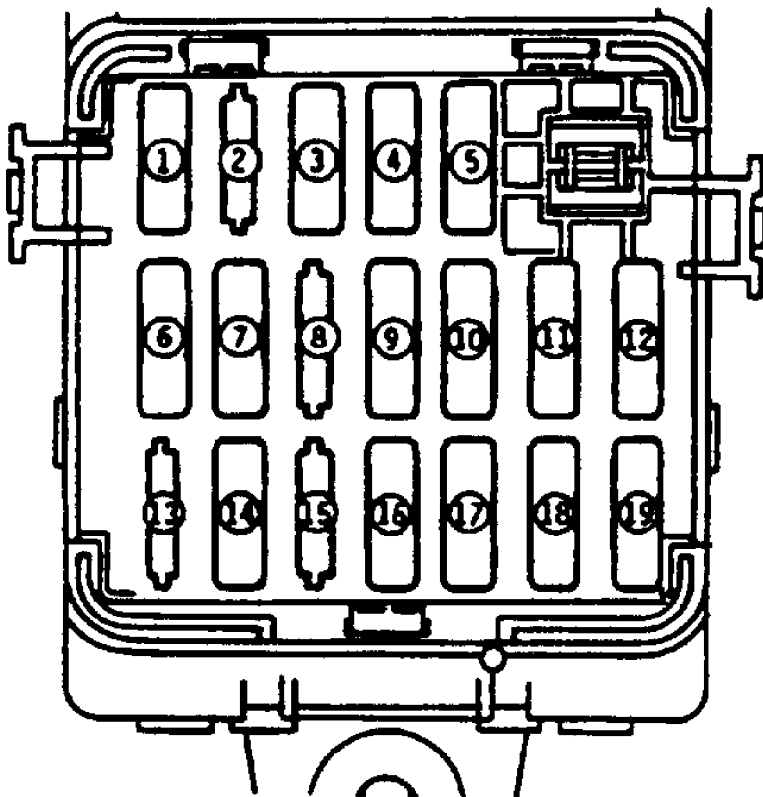

50I11823

Fig. 2: Interior Relay Box Identification
Courtesy of Mitsubishi Motors.

Fuse & Relay Identification

- 1 - 10 Amp (Red)
Power Mirror, Heated Mirror
- 2 - Power Door Lock Relay
- 3 - Not Used
- 4 - Rear Window Defogger Relay
- 5 - Power Window Relay

Interior Relay Box

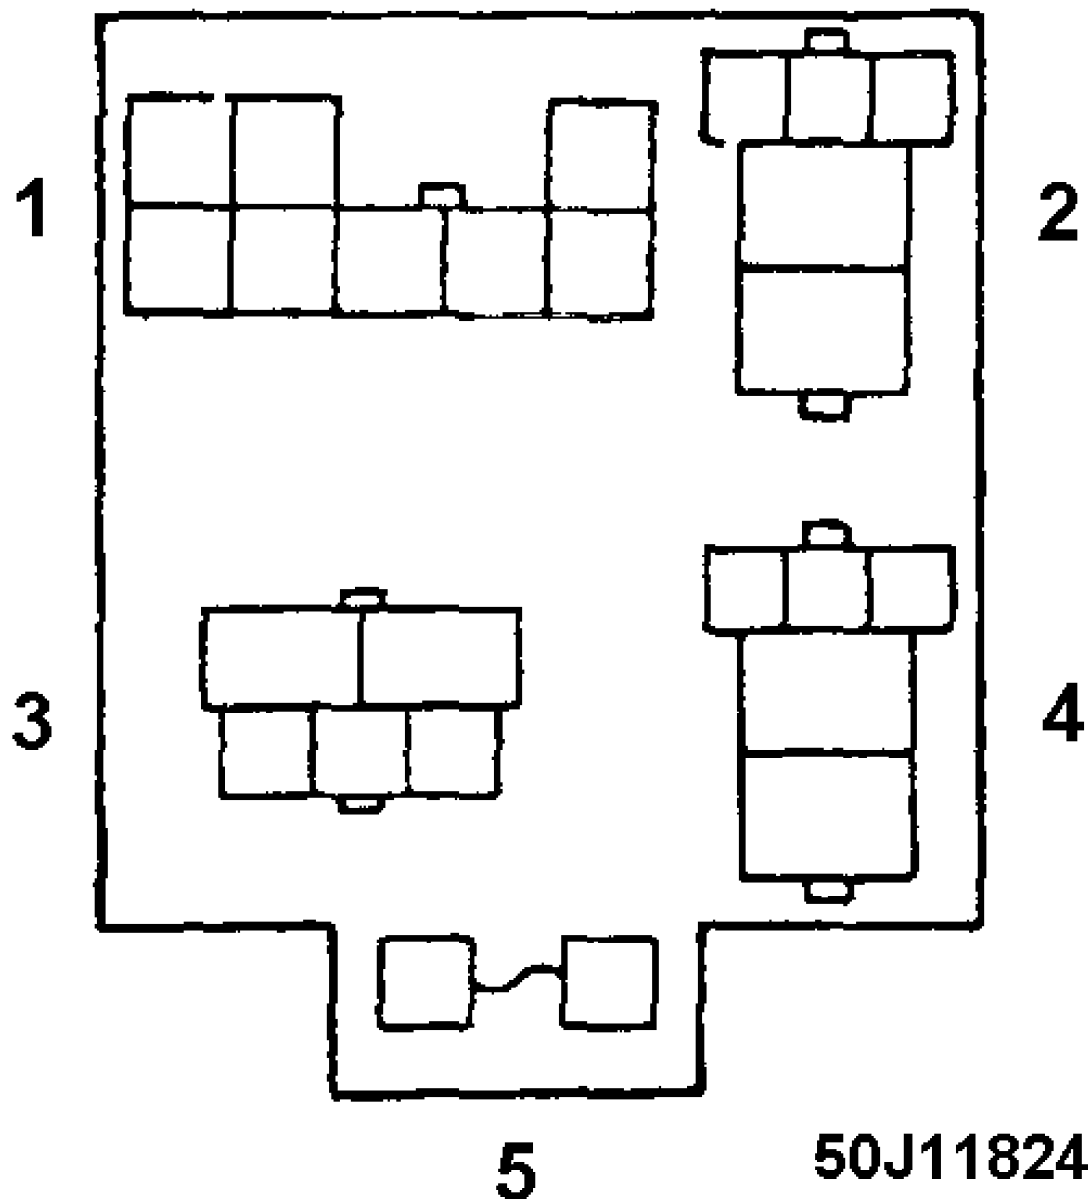


Fig. 3: Power Distribution Fuse Identification
Courtesy of Mitsubishi Motors.


WARNING: Always disconnect battery ground cable before servicing "high-current fuses. It is recommended that "high-current"

fuses be replaced by a qualified technician.

Fuse & Fusible Link Identification

- 1 - 120 Amp (Wine Red)
Generator
- 2 - Not Used
- 3 - 40 Amp (Green)
Lighting
- 4 - 30 Amp (Pink)
Ignition
- 5 - 40 Amp (Green)
Radiator Fan and Condenser Fan Motor
- 6 - 40 Amp (Green)
Fuse 1, 6, 14, 16, 17, 19
- 7 - 60 Amp (Yellow)
ABS
- 8 - Not Used
- 9 - 30 Amp (Pink)
Power Windows
- 10 - 40 Amp (Green)
Defogger
- 11 - Not Used
- 12 - 20 Amp (Yellow)
MFI
- 13 - 15 Amp (Blue)
Tail Lights
- 14 - 10 Amp (Red)
Horn
- 15 - 15 Amp (Blue)
Fog Light
- 16 - 10 Amp (Red)
High-Beams
- 17 - 10 Amp (Red)
Hazard
- 18 - Not Used
- 19 - 20 Amp (Yellow)
Condenser Fan Motor
- 20 - 10 Amp (Red)
Air Conditioner
- A - Headlight Relay
- B - Not Used
- C - Fog Light Relay
- D - Radiator (LO) Fan Relay
- E - Tail Light Relay
- F - Horn Relay
- G - Radiator (HI) Fan Relay
- H - Not Used
- I - Starter Relay
- J - Generator Relay
- K - IOD or Storage Connector

Relay box in engine compartment

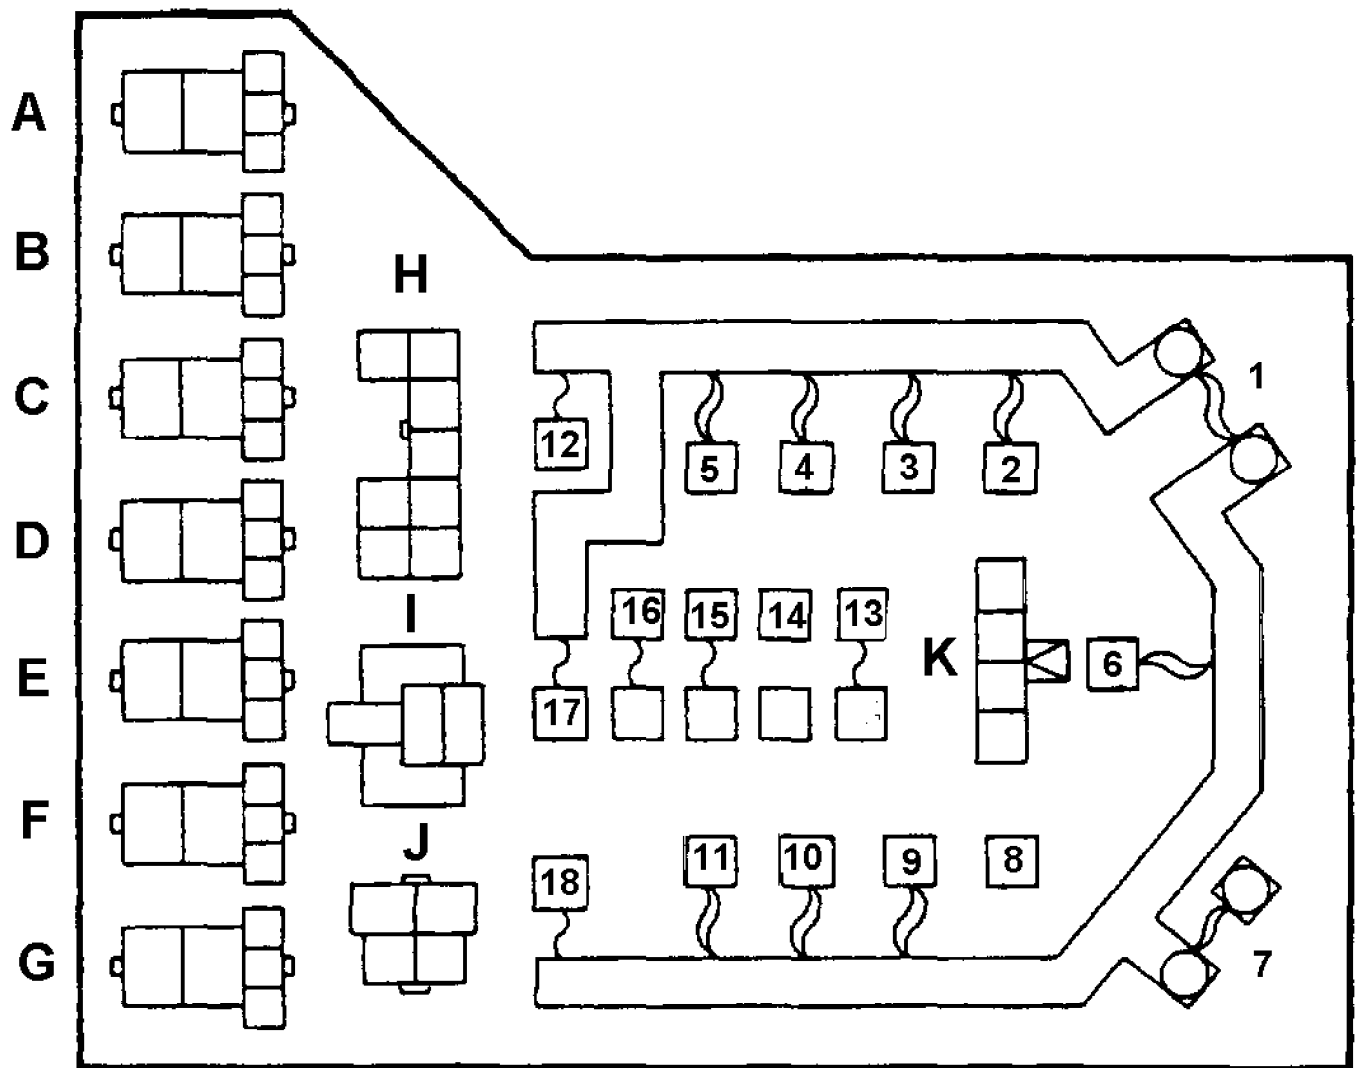

50A11825

Fig. 4: Underhood Air Conditioner Relay Box Identification
Courtesy of Mitsubishi Motors.

Fuse & Relay Identification

- 1 - 20 Amp (Yellow)
Condenser Fan Motor
- 2 - 10 Amp (Red)
Air Conditioner
- 3 - Condenser (HI) Fan Relay
- 4 - Not Used
- 5 - Magnetic Clutch Relay
- 6 - Condenser (LO) Fan Relay

BATTERY SPECIFICATIONS

CAUTION: When battery is disconnected, vehicles equipped with

computers may lose memory data. When battery power is restored, driveability problems may exist on some vehicles. These vehicles may require a relearn procedure. See COMPUTER RELEARN PROCEDURES article in the GENERAL INFORMATION section.

Vehicles are delivered with a maintenance-free battery. Normally the battery does not require additional water. However, adding distilled water may be necessary during the battery life. The battery contains a visual test. To determine the battery charge, check the battery test indicator on top of the battery.

REPLACEMENT BATTERY SPECIFICATIONS TABLE

Engine Size	BCI Group Number
3.0L	23 or 26

CAUTIONS & WARNINGS

SUPPLEMENTAL RESTRAINT SYSTEM (AIR BAG)

NOTE: See the AIR BAGS article in the ACCESSORIES/SAFETY EQUIPMENT Section.

Modifications or improper maintenance, including incorrect removal and installation of the Supplemental Restraint System (SRS), can adversely affect system performance. DO NOT cover, obstruct or change the steering wheel horn pad in any way, as such action could cause improper function of the system. Use only plain water when cleaning the horn pad. Solvents or cleaners could adversely affect the air bag cover and cause improper deployment of the system.

WARNING: To avoid injury from accidental air bag deployment, read and carefully follow all warnings and service precautions. See appropriate AIR BAGS article in ACCESSORIES/SAFETY EQUIPMENT.

CAUTION: Disconnect negative battery cable before servicing any air bag system, steering column or passenger side dash component. After any repair, turn ignition key to the ON position from passenger's side of vehicle in case of accidental air bag inflation

AIR CONDITIONING SERVICING

CAUTION: Avoid breathing R-134a refrigerant and PAG lubricant vapors, exposure may irritate eyes, nose and throat. To remove R-134a from system use R-134a recycling equipment that meets SAE J2210 specifications. If accidental system discharge occurs, ventilate work area before resuming service.

WARNING: R-134a service equipment or vehicle A/C systems SHOULD NOT be pressure tested or leak tested with compressed air. Some mixtures of air/R134a have shown to be combustible at elevated pressures. These mixtures are dangerous and may cause fire and/or explosions. See AIR CONDITIONING SERVICE article in GENERAL INFORMATION section.

ANTI-LOCK BRAKE SYSTEM

The anti-lock brake system contains electronic equipment that

can be susceptible to interference caused by improperly installed or high output radio transmitting equipment. Since this interference could cause the possible loss of the anti-lock braking capability, such equipment should be installed by qualified professionals.

On models equipped with anti-lock brake systems, ALWAYS observe the following cautions:

- * DO NOT attempt to bleed hydraulic system without first referring to the appropriate ANTI-LOCK BRAKE SYSTEM article in the BRAKES Section.
- * DO NOT mix tire sizes. As long as tires remain close to the original diameter, increasing the width is acceptable. Rolling diameter must be identical for all 4 tires. Some manufacturers recommend tires of the same brand, style and type. Failure to follow this precaution may cause inaccurate wheel speed readings.
- * Use ONLY recommended brake fluids. DO NOT use silicone brake fluids in an ABS-equipped vehicle.

BATTERY WARNING

WARNING: When battery is disconnected, vehicles equipped with computers may lose memory data. When battery power is restored, driveability problems may exist on some vehicles. These vehicles may require a relearn procedure. See COMPUTER RELEARN PROCEDURES article in GENERAL INFORMATION section.

REPLACING BLOWN FUSES

Before replacing a blown fuse, remove ignition key, turn off all lights and accessories to avoid damaging the electrical system. Be sure to use fuse with the correct indicated amperage rating. The use of an incorrect amperage rating fuse may result in a dangerous electrical system overload.

BRAKE PAD WEAR INDICATOR

Indicator will cause a squealing or scraping noise, warning that brake pads need replacement.

CATALYTIC CONVERTER

Continued operation of vehicle with a severe malfunction could cause converter to overheat, resulting in possible damage to converter and vehicle.

Any modification to the exhaust system on turbo models, which reduces exhaust backpressure, will lead to lean fuel mixtures and excessive spark advance. This could cause serious engine damage.

ELECTROSTATIC DISCHARGE SENSITIVE (ESD) PARTS

WARNING: Many solid state electrical components can be damaged by static electricity (ESD). Some will display a warning label, but many will not. Discharge personal static electricity by touching a metal ground point on the vehicle prior to servicing any ESD sensitive component.

ENGINE OIL

CAUTION: Never use non-detergent or straight mineral oil.

FUEL SYSTEM SERVICE

WARNING: Relieve fuel system pressure prior to servicing any fuel system component (fuel injection models).

HALOGEN BULBS

Halogen bulbs contain pressurized gas which may explode if overheated. DO NOT touch glass portion of bulb with bare hands. Eye protection should be worn when handling or working around halogen bulbs.

RADIATOR CAP

CAUTION: Always disconnect the fan motor when working near the radiator fan. The fan is temperature controlled and could start at any time even when the ignition key is in the OFF position. DO NOT loosen or remove radiator cap when cooling system is hot.

RADIATOR FAN

WARNING: Keep hands away from radiator fan. Fan is controlled by a thermostatic switch which may come on or run for up to 15 minutes even after engine is turned off.

TURBOCHARGED MODELS

CAUTION: Do not race engine immediately after starting. When stopping engine, allow engine to idle for approximately 60 seconds before shutting it off. Failure to do so may cause turbocharger damage due to lack of oil flowing to the turbocharger bearings.